

Graymills MODEL AL-2 PARTS WASHER LIGHT

INSTALLATION INSTRUCTIONS

795-06563

Graymills Model AL-2 Parts Washer Light comes complete with all mounting hardware and accessories. Each AL-2 includes:

- 1 - Shaded lamp assembly
- 1 - Right-angle mounting bracket
- 2 - Sets of 1/4-20 screws and nuts
- 1 - Jam Nut
- 1 - Metal mounting button

The AL-2 may be mounted on the sides or back of any **Graymills Handi-Kleen Parts Washer** and **on Models 100, 300 and 500 Clean-O-Matic® Parts Washers**.

CAUTION

Before drilling holes, make sure the area to be drilled is well above the solvent reservoir level

1. Place the Right-angle Bracket so that the longest part is horizontal to the floor. Using the two holes in the short end of the bracket as a template, drill two 1/4" holes in the tank.
2. Attach the Right-angle Bracket to the tank using the two sets of 1/4-20 screws and nuts supplied.
3. Attach the metal button to the Right-angle Bracket at either of the two sets of pre-drilled holes, using the jam nut supplied.
4. Attach the lamp to the metal button by lifting the locking ring at the base of the lamp arm and pushing down. Release the locking ring and the lamp is secured. Reverse the process to remove the lamp.

CAUTION

At no time should the lamp shade obstruct the parts washer lid. Each Handi-Kleen and Clean-O-Matic® is equipped with a fusible link which melts to slam the lid closed in the event of a fire in the tank. Any obstruction of the lid could prevent it from properly closing in the event of fire.

The AL-2 uses standard household bulbs — 40-watt bulb recommended. 75-watt bulb is maximum. Do not use any bulb size that extends beyond the lamp shade.

Graymills CORPORATION

3705 N. Lincoln • Chicago, IL 60613

(773) 248-6825 Fax: (773) 477-8673

www.graymills.com